

Marka	Model	Chassis	CPU	Opis
AIWA	TV-C1400		ST92195B7T-DE2(DW92195B7T-DE2)	zeszyt 16
AIWA	VX-T149		OEC0078C	zeszyt 16
AIWA	TV-A2110, TV-12115, TV-A2118		TMP87CP38N-xxx	zeszyt 13
AIWA	TV-SE1430, TV-SE2130		TDA9367L	zeszyt 15
AIWA	VX-D1420		OEC0085B	zeszyt 15
AIWA	VX-G140		OFC6044D	zeszyt 13
AIWA	VX-T147		OEC6044D	zeszyt 8
AIWA	VX-G142		OEC6044D	zeszyt 10
AIWA	TV-CN202		M37272M8-131SP	zeszyt 11
AKAI	CT-1419..., CT-2019..., CT-2119..., CT-2159...	B20	MN1520810	zeszyt 11
AKAI	CT2899	DIGITAL B-E2	CCU11, CCU12	zeszyt 2
AKAI	CT-W3257, CT-W2855	FEATURE STEREO FW-16:9	SDA30C163+EPROM	zeszyt 11
AKAI	TV1420, TV1421, TV2020, TV2021, TV2120, TV2121	MONO PLUS 2	SDA5222(23), SDA5252(53)	zeszyt 11
AKAI	CT2161, CT25(28)65, CT25(28)67	SP		zeszyt 8
AKAI	TV2550, TV2551, TV2850, TV2851, TV2852, TV2881, TV3451	STEREO PLUS 2 SW	SDA30C163+EPROM	zeszyt 11
AKAI	TV2835	TV9.7(TV9.8)	ST92R195+EPROM	zeszyt 11
AKURA	CX25, CX26, CX34, CX35		TVPO 2066	zeszyt 7
AKURA	CX12, CX23, CX33		TVP2070	zeszyt 7

BANG & OLUFSEN	BEOVISION: L(X)4500/5500, MX3500/5500			zeszyt 8
BEKO	SIESTA	AT3	SDA20563-A512 (A514)	zeszyt 4
BELSTAR	2196, 2197, 2596, 2597, 2896, 2897	E-9	SDA5252, SDA5255	zeszyt 5
BLAUPUNKT	MM63-13 VT, MM63-14 HT	FM240.00	ZC 88649P, ZC88644P, ZC424701	zeszyt 6
BLAUPUNKT	Digital Pro: MS 70-100, CS 82-100	FM600.70 (71)		zeszyt 8
BLAUPUNKT	IS63(72)-53 Digit Pro	FM640.40MC	68HC11F1+EPROM	zeszyt 3
BLUESKY	CD855T, 5870DW	PT-92DVD	TDA935x/6x/8x	zeszyt 16
BRANDT		ICC17	ST92R195+EPROM	zeszyt 6
BRANDT		ICC19	ST90R92+EPROM	zeszyt 6
BRANDT		TX92F ver.2	ST92T93J9B1	zeszyt 11
BRANDT		TX807	TMP47P1637UN	zeszyt 7
CROWN	CROWN 2001		SAA5290 (CTV811S)	zeszyt 16
CROWN	CR20NT, CR1406FT		TVPO 2066	zeszyt 7
CURTIS	C-14/21/25/28M1(M2)...		MC68HC705T10B (CURTIS 0003)	zeszyt 2
CURTIS	C-14/21/25/28M1(M2)		MC68HC705T10B (CURTIS 0006)	zeszyt 6
DAEWOO	DTA-14C4TFF, DTA- 14V1TF, DTA-20C4TF, DTA-21C6TFF	CP-185	TDA9361PS/N1/3	zeszyt 16
DAEWOO	20(21)T1ST, 20(21)T2ST, 20T8ST, 20T3WST, 21T5ST, 21T9ST	CP-380	DW5255S1	zeszyt 16
DAEWOO	DTH-25G1FST/FSP/FS, DTH-29G1FST/FSP/FS, DTH-29G3FST/FSP/FS	CM-870	TMP87CM38N	zeszyt 15
DAEWOO	DVQ-13H1(H2)FCN, DVQ- 19H1(H2)FCN	CN-081	DW37760MOH-BA1 (M37760)	zeszyt 15
DAEWOO	DTH-14V1/V3/V4FS, DTH- 20V1/V3/V4FS, DTH- 21V1/V3/V4FS	CM-003	DW863228V-CM1	zeszyt 13

DAEWOO	DTC – 25G1VM, DTC – 25G3VMR, DTC – 25G4VMS,	CM-900, DTC?25G7VM, DTC?25G1TM, DTC?29G1TM DTC?29G1VM	TMP87PS38	zeszyt 12
DAEWOO	DTC-29Z9, DTY-29Z9, 29Z9PIP	CM-915	M37270EF(MF)-xxx SP	zeszyt 12
DAEWOO	DTW-28W2F, DTW-2810F	WP-811		zeszyt 12
DAEWOO	14(A5, Q1, Q2, Q3, T1, T2), 20(A5, Q1, Q2, Q3, T1, T2), 21(A5, Q1, Q2, Q3, T1, T2)	CP-375	DW370M(TMS370C(P)08A05)	zeszyt 11
DAEWOO	14(A5T, Q1T, Q2T, Q3T, T1T, T2T), 20(A5T, Q1T, Q2T, Q3T, T1T, T2T), 21(A5T, Q1T, Q2T, Q3T, T1T, T2T)	CP-375	DW5255M, DW5255RM (SDA5255- Axxx)	zeszyt 11
DAEWOO	2594ST, 2896ST, 2898ST	CP-775	DW5255S1 (SDA5255)	zeszyt 6
DE GRAAF	D59HZ5, D66HZ5		MC68HC05	zeszyt 7
DUAL	TVM4055	DTV-1	CCU09, CCU10, CCU13	zeszyt 2
DUAL	TV1170	DTV-2	CCU2070	zeszyt 2
DUAL	TV5504	TV-4	ST6385	zeszyt 3
ELEMIS			SDA20563-A508/A516	zeszyt 1
ELEMIS	6870DW	PT-92DVD	TDA935x/6x/8x	zeszyt 16
FERGUSON	51(K4, K5, K7, L3, L7), 59(K4, K5, K7, L7, M5), 68(K4, M5)	ICC5	HD 404 919	zeszyt 7
FERGUSON		ICC11	ST90R91BC1+EPROM	zeszyt 8
FERGUSON		ICC17	ST92R195+EPROM	zeszyt 6
FERGUSON		ICC19	ST90R92+EPROM	zeszyt 6
FERGUSON		TX807	TMP47P1637UN	zeszyt 7
FINLUX	63U1, 63Z2, 71U1, 71Z2	FEATURE STEREO	SDA30C163+EPROM	zeszyt 7
FINLUX	14A1 TX, 51A1 TX, 55A1 TX	MONO PLUS 2	SDA5222(23), SDA5252(53)	zeszyt 11

FINLUX	3021		SDA2080	zeszyt 7
FINLUX	4028D		SDA20160	zeszyt 1
FINLUX	5021A20(F12)GR, 5025K10(F12)GR, 5028K10(F12)GR	5000	SDA20320	zeszyt 1
GOLDSTAR (LG)	CI-21Q20, CK-21Q20, CL- 21Q20	99 DA	CXP86441-562S (LG8818-17C)	zeszyt 12
GOLDSTAR (LG)	CE-20J3BX, CE-20J3GX, CE-20J3RX	MC-009A	SDA5555 (LG8003-16A), SDA5521 (LG8003-17A)	zeszyt 12
GOLDSTAR	KY-14V30, KY-20V30	MC-48A	M38184MA – xxxFP	zeszyt 8
GOLDSTAR (LG)	WF-32A10S	MC-52A	CXP85P4064SD (CXP85340)	zeszyt 13
GOLDSTAR (LG)	CF-29H90TM	MC-71B	CXP85452-135S (LG8734-01E)	zeszyt 15
GOLDSTAR (LG)	CF-29H30	MC-74A	CXP86441-509S (LG8738-05C)	zeszyt 12
GOLDSTAR (LG)	CF-29H70	MC-74A	CXP86441-505S (LG8738-05B)	zeszyt 12
GOLDSTAR (LG)	CF-29K40	MC-74A	CXP86324	zeszyt 12
GOLDSTAR (LG)	CA -14F33W, CF-14D73/X, CF-14F33, CZ-14F33, CF- 20D73/X, CF?20F33W, CZ- 20F33, CF-21D73/X, CF- 21F33, CZ-21F33	MC-84A	CXP86324 (LG8838-6D)	zeszyt 15
GOLDSTAR (LG)	CF-21S14	MC-84A	CXP86441-526S (LG8838-6D),	zeszyt 15
GOLDSTAR (LG)	CF-14/16/20/21S10E/X/12E	MC-84A	CXP86441-524S (LG8838-6C)	zeszyt 15
GOLDSTAR (LG)	CF-14/20/21K50E/52E/X	MC-84A	CXP86441-523S (LG8838-07C)	zeszyt 15
GOLDSTAR (LG)	CA-21D33EX, CF-20D33E, CF21D33E, CT-20D33E, CT- 21D33E,	MC-84A	CXP86324 (LG8838-06D)	zeszyt 15
GOLDSTAR (LG)	CT-29Q10E/EN/ET, CE/CL- 29Q10ET	MC-991A	CXP86441-571S (LG8993-24A)	zeszyt 6
GOLDSTAR (LG)	CT-29Q10ET	MC-991A	CXP86441-567S (LG8993-16B), CXP86441-569S (LG8993-21A), CXP86441-571S (LG8993-24A)	zeszyt 14
GOLDSTAR (LG)	CT-29Q12IP, WE-32Q10IP	MC-993A	CXP750097-110S (LG8993-32A), CXP7500P11S-1	zeszyt 13
GOLDSTAR	CF-14K49E, CF-20K49E, CF-	MC-994A	LG8993-27A(B), (-28A, -29A)	zeszyt

(LG)	21K49E			13
GOLDSTAR (LG)	CB-25(29)H30, CB-25(29)H40E, CF-25(29)H40T, CL-29N32X(42X)	PC-8KA		zeszyt 11
GOLDSTAR (LG)	CF-25A64DF, CF25A64D/T, CF-28A64T	PC-73A	CXP86441-501S (LG8618-09A)	zeszyt 14
GOLDSTAR (LG)	CI-20F60, CK-20F60, CL-20F60	PC-81B	CXP86441-533S (LG8818-19A)	zeszyt 12
GOLDSTAR (LG)	CI-21T20, CK-21T20, CL-21T20	PC-81B	CXP864P61S (LG8991-04B)	zeszyt 12
GOLDSTAR (LG)	WF-32A22DI	PC-82A	SDA30C163-3+EPROM	zeszyt 13
GOLDSTAR	CB25(28)C20X, CB25(28)C22X	PC-33B	GS831001A	zeszyt 3
GOLDSTAR	CF-25C28F, CF-28C28F	PC-58A	CXP852P3264S0	zeszyt 7
GOLDSTAR (LG)	DI -28Z12	PD-8TA	CXP864P61S-1	zeszyt 16
GRAETZ	7173	EUROSTEREO 2B-F	NES3AR01, NES3BR02,	zeszyt 2
GRAETZ	CB5373Z/UKVCX		CCU SEL04, CCU SEL07A	zeszyt 3
GRUNDIG	ACCRO 102 (MFW 102-6110 MV/AC3)		750010-144S	zeszyt 15
GRUNDIG	M63(72)-105, ST63(72)-..., ST63-781, E63(72)-911	CUC1822 (1823, 1852)	MC68HC11F1+EPROM	zeszyt 3
GRUNDIG	MW70-100/8, BERLIN SE70-100/8, BERLIN SE7027/8 PIP	CUC1828	SDA5250+EPROM	zeszyt 11
GRUNDIG	Atlanta SE7250(/8) (PIP) DOLBY, Sydney SE7230 DOLBY,	CUC1832 Xentia 72 Flat MF72-490(/8) DOLBY, Xentia 72 M72-400(/8) DOLBY	SAB-C161 RI-L16F+EPROM	zeszyt 9
GRUNDIG	M70-, M82-, M95-	CUC 1835 (1860, 1880, 1890)	SDA30161+EPROM	zeszyt 5
GRUNDIG	M63-281 IDTV/LOG, M63-400/8M70-281 IDTV/LOG, M70-290(/8) IDTV, ST63-270/8 IDTV, ST70-200 IDTV, ST70-250 IDTV, ST70-260/8 IDTV, ST70-209, ST70-270(/8) IDTV, ST70-278 IDTV, ST70-869 a IDTV, DAVIDO70 M70-290(/8) IDTV (VNM), Greenville 100 SE 7030 (VNM), Sydney: 100	CUC1836	SDA5250-100	zeszyt 8

	SE 7021 IDTV/LOG, 100(/8) SE 7020(/8) IDTV/LOG, Wien 100SE 6320 IDTV/LOG, Xentia 63 M63- 400/8 (VNM),			
GRUNDIG	Elegance 70 MW 70-150/8 DOLBY	CUC1934	SDA6000	zeszyt 15
GRUNDIG	Elegance 82 MW 82-150/8 DOLBY, Elegance 82 Flat MFW 82-3110 MV/ DOLBY, Hamburg SE 8240 DOLBY	CUC1935	SDA6000	zeszyt 15
GRUNDIG	Elegance 70 M 70-300 DOLBY, Elegance 70 ST 70- 300(/8) DOLBY	CUC1837	SDA6000	zeszyt 15
GRUNDIG	M72-410(/9) Reference (/PIP)	CUC1842	MC68HC11F1+EPROM	zeszyt 9
GRUNDIG	M95-410(411)/9 Reference/PIP, M95-410/90 Reference	CUC1894	MC68HC11F1+EPROM	zeszyt 9
GRUNDIG	MW82-40/8(50/8), M84-211/8 IDTV	CUC1929	SDA5250-100	zeszyt 8
GRUNDIG	Arganto 70 MW70-510/8 DPL, Berlin SE7050/8 PIP/DOLBY	CUC1930	SAB-C161 RI-L16F+EPROM	zeszyt 9
GRUNDIG	Arganto 82 MW82-510/8 DPL, Denver SE 8250/8 PIP/DOLBY	CUC1931	SAB-C161 RI-L16F+EPROM	zeszyt 9
GRUNDIG	M 70-169/9 IDTV, M 82- 169/9 IDTV	CUC1951/1982	MC68HC11F1+EPROM	zeszyt 9
GRUNDIG	M70-269/9 Reference, MW70-269 PALplus, Trento: SE7016/9 PIP Reference, SE7026/9 PALplus	CUC1952	MC68HC11F1+EPROM	zeszyt 9
GRUNDIG	Arganto 82 MW82-520/9 PALplus, M82-269 PALplus/LOG, MW82-100/9 PALplus	CUC1983	MC68HC11F1+EPROM	zeszyt 9
GRUNDIG	Denver: SE82-100PALplus, SE8216/9 (PALplus), M82- 269/9 Reference, MW82- 100/9	CUC1984	MC68HC11F1+EPROM	zeszyt 9
GRUNDIG	ST72-860 FR/TOP, ST72-870 FR/TOP (VNM)	CUC-2031F	SDA5256C-G001	zeszyt 13
GRUNDIG	Greenville 7005 TOP, ST63- 702 TOP, ST63(70)-782 TOP, ST70-702 TOP(/TR), ST70- 788 A, ST70-798 text, ST70-	CUC2032	SDA5257-2-G301	zeszyt 9

	820 TOP			
GRUNDIG	Greenville 550SE5586 TOP, ST55-800 a TOP, ST55-850 TOP, ST55-710 NIC/TOP, ST55-725 a FT/GB, ST55-800 NIC/TOP, ST55-850 NIC/TOP	CUC2020(N)	SDA5257-2	zeszyt 7
GRUNDIG	DAVIO 55: ST 55-855TOP, ST 55-870FR/TOP, Greenville 560SE 5587TOP, ST55-805TOP(/TR), ST55-870FR/TOP, ST55-905FR/TOP	CUC 2021 (CUC2021F)	SDA5257-2 (SDA5257-2-G212)	zeszyt 12
GRUNDIG	Greenville 7003text (NIC/TOP), ST63-780 text ST63-701(702) NIC/TOP, ST63-706 NIC/TOP, ST63-712 NIC/TOP, ST63-782 NIC/TOP, ST63-700 A NIC/FT, ST63-700 NIC/TOP, ST63-705 NIC/text, ST63-780 NIC/TOP, ST70-600 text, ST70-602 NIC/TOP, ST70-700 NIC/TOP, ST70-700 A NIC/FT, ST 70-788, ST70-798 text, ST70-701(702,703) NIC/TOP, ST70-706 NIC/TOP, ST70-712(/5) NIC/TOP, ST70-730 NIC/TOP, ST70-780 NIC/TOP ST70-782 NIC/TOP, ST70-705 NIC/text, ST70-710 NIC/text, ST70-715 NIC/TOP, ST70-700 text, ST70-780 text	CUC2030(N)	SDA5257-2-G301	zeszyt 8
GRUNDIG	Melbourne SE7212 TOP, ST72-600(862) TOP	CUC2033	SDA5257-2-G301	zeszyt 9
GRUNDIG	Greenville 7004 NIC/TOP, DAVIO 70 ST70-853 NIC/PIP, ST70-810 DPL, ST70-819 NIC/TOP	CUC2050(N)	SDA5257-2-G301	zeszyt 8
GRUNDIG	Melbourne SE7210A NIC/TOP, ST72-700 TOP	CUC2051N	SDA5257-2-G301	zeszyt 8
GRUNDIG	MW82-2690(99) DPL/FT (NIC/FT, NIC/TOP)	CUC2058N	SDA5257-2-G301	zeszyt 8
GRUNDIG	MW70-2690(99) DPL/TOP(NIC/FT, NIC/TOP)	CUC2059N	SDA5257-2-G301	zeszyt 8
GRUNDIG	ST 84-896 FR/TOP	CUC2080F	SDA5256C, SDA5257C	zeszyt

				16
GRUNDIG	ST84-896 NIC/TOP	CUC2080N	SDA5257-2-G301	zeszyt 8
GRUNDIG	P 27-649/12	CUC5200	ZC411860	zeszyt 11
GRUNDIG	P37-..., P40-..., P45-..., P50-..., T51-..., T55-..., T65-..	CUC5301		zeszyt 6
GRUNDIG	M55-..., M63-..., ST63-..., ST70-..., ST1663(70)...	CUC5360, CUC5361	SDA20561, SDA20562	zeszyt 3
GRUNDIG	ST63(70)-660	CUC5510, CUC5511	SDA20561-A001	zeszyt 3
GRUNDIG	P37-..., P40-..., P42-..., P45-..., P50-..., T51-..., T55-..	CUC6300	ZC88642P	zeszyt 3
GRUNDIG	T63480 text, T63-640 a text, T63-640 I/text, T70-640 a text, T63-640 a FT/GB, T63-640 OIRT, T70-640 OIRT T70-640 a FT/GB	CUC 6310	ZC 88644P, ZC88649P, ZC424701	zeszyt 10
GRUNDIG	ST63-750/9 TOP, ST63-800(/9) TOP/LOG, ST70-705/9 TOP(/LOG), ST70-750/9 TOP, ST70-755(/9) TOP/LOG, ST70-800(/9) TOP/LOG, ST70-95 TOP, Copenhagen ST763 TOP/LOG, Greenville 70ST177 TOP, Hamburg ST770/9 TOP, SE6376 TOP/LOG	CUC6360	MC68HC11F1+EPROM	zeszyt 8
GRUNDIG	P37-065, P37-070, P37-730	CUC7301	ZC 88667P (TEXT), ZC411718P	zeszyt 5
GRUNDIG	P37-066/5, P37-071(GB), P37-731 text (GB), P45-731 text, T51-071, T51-720 text (GB), T51-731 text, T51-732/5 text, T55-731 text, T55-732/5 text, T55-733/5 text	CUC7303	SDA5222, SDA5252(TEXT)	zeszyt 7
GRUNDIG	P37-731/12 text, P37-830/12 text Globetrotter, T51-830/12 text	CUC7305	SDA5222, SDA5254(TEXT)	zeszyt 14
GRUNDIG	ST55-95(725, 750, 800)	CUC7350	ZC411867P (MC68HC05T3)	zeszyt 3
GRUNDIG	E72-911TOP, M72-795TOP, M72-795/9TOP	CUC7851	MC68HC11F1+EPROM	zeszyt 8
GRUNDIG	ST63 760/9, ST70 760/9, E72 9112	CUC 7861	MC68HC11F1+EPROM	zeszyt 10
GRUNDIG	ST82775..., T95775...	CUC7880,	SC415008FN4+EPROM	zeszyt



		CUC7890		2
HANSEATIC	ST6714	DTV-1	CCU09, CCU10, CCU13	zeszyt 2
HANSEATIC	TV5520	TV-4		zeszyt 3
HITACHI	C21/25/28-P745VT, C28-P405VT		CCU-SALO-09	zeszyt 1
HITACHI	C2156(86)TN, CL(CP)2156TA(N), C24W1TN, CL24W1TAN, C2556(86)TN, CL(CP)2556TA(N), C2856(86)TN, CL28W1TA(N), CL28WD2T(A)N, CL(CP)2856TA(N), CL(CP)2886TAN, CP28WD2TAN, C32WD2TN, CL32WD2TAN, CP32WD2TAN		SAA5296	zeszyt 7
HITACHI	CL2892TAN, CP2892TAN		SDA5250M-C17+EPROM	zeszyt 9
HITACHI	CPT2656, CPT2658 T/T		SAA1294-2	zeszyt 8
HITACHI	C2575(76)(77)TN, C2975(76)(77)TN, CL25(29)76TAN CP25(29)76TAN, C28300(TN)	A5	ST90R28+EPROM	zeszyt 7
HITACHI	CP2893TAN, CL28500TAN, CL2995TAN	A5WK	M37270MF	zeszyt 4
HITACHI	CS2840TA	EUROSTEREO 2	NES3-..., NES2-... ..	zeszyt 2
HITACHI	CL2894TAN, CP2894TA(N), CP2994TA(N)	FEATURE STEREO	SDA30C163+EPROM	zeszyt 7
HITACHI	CL1422R	F1FR	SAA5288PS/030	zeszyt 8
HITACHI	CP1422R	F1GR	SAA5288PS/006	zeszyt 8
HITACHI	CP1422T	F1GY	SAA5290PS/089	zeszyt 8
HITACHI	CP1422T-481, CP1422T-491	F1HY	SAA5290PS/104	zeszyt 8
HITACHI	CS1422R	F1KR	SAA5288PS/032	zeszyt 8
HITACHI	C1422R	F1R	SAA5288PS/006	zeszyt

				8
HITACHI	C1422T	F1Y	SAA5290PS/089	zeszyt 8
HITACHI	CP2022T	F2GY	SAA5290PS/104	zeszyt 8
HITACHI	CP2022T-491	F2HY	SAA5290PS/089	zeszyt 8
HITACHI	CS2022R	F2KR	SAA5288PS/032	zeszyt 8
HITACHI	CP2122R	F4GR	SAA5288PS/006	zeszyt 8
HITACHI	CP2122T	F4GY	SAA5290PS/089	zeszyt 8
HITACHI	CP2122T-481, CP2122T-491	F4HY	SAA5290PS/104	zeszyt 8
HITACHI	CL2122R	F4FR	SAA5288PS/030	zeszyt 8
HITACHI	CS2122R	F4KR	SAA5288PS/032	zeszyt 8
HITACHI	C2122T	F4Y	SAA5290PS/089	zeszyt 8
HITACHI	C25(28)44TN, C25(28)64TN	G10	ST6385	zeszyt 7
HITACHI	CP2896TA(N), CP2996TA(N)	MX	SDA30C264+EPROM	zeszyt 8
HITACHI	20CX20B501, 20CX20B511, 20CX20B521	NA6L	MN1873265T7P	zeszyt 8
HITACHI	CP2133TA, CP2133TAN, CL2133TA,C2133TN	STEREO PLUS	ST9293	zeszyt 7
HITACHI	C2978FS, C2989FS, CMT2978	V1	M37221MA	zeszyt 15
HITACHI	C1445MN, C1465MN, C14M-KT1, C2045MS, C2048FS, C2065MS, C2081MSR, C2086FS, C2116MS, C2120PN, C2123MN, C2125MS, C2128FS, C2145MS, C2148FS, C2165MS, C2170MS, C2171MS, C2172FMS, C2172FSN,C2176FS, C2181MS, C2181MSR, C2186FS, C2198FS, CMT2181MN	V2	Z9023406PSCA	zeszyt 16
ITT	7170	DIGI B-E	CCU NG 08AR, CCU NG 09AR	zeszyt

				10
ITT	7171	DIGITAL B-E2	CCU11, CCU12	zeszyt 2
ITT	DIGIVISION 3876 HIFI	Digital 3 110°	CCU SEL01, CCU SEL02	zeszyt 10
ITT - NOKIA	6384, 6394, 7184, 7194	EURODIGI 4:3	CCU3000+EPROM	zeszyt 2
ITT - NOKIA	DIGIVISION 63...2, 71...2	EUROSTEREO 1	NES3-..., NES2-...	zeszyt 2
ITT	7173	EUROSTEREO 2B-F	NES3AR01, NES3BR02, NES2- 2R01, NES2-4R01	zeszyt 2
ITT-NOKIA	6390, 7190, MV4000, 852 SAT SOLI, 882 SAT SOLI, 885 SAT SOLI	M1	CCU-SALO-07 (CCU20xx)	zeszyt 4
ITT	5575SFN	STEREO PLUS	ST92T93	zeszyt 2
ITT			SAA1293-03	zeszyt 1
ITT			SAA1293A-03	zeszyt 1
ITT			TVPO2065-D01	zeszyt 1
ITT			TVPO2066-A24	zeszyt 1
ITT	DIGIVISION 359(387)8F		CCU SEL04, CCU SEL07A	zeszyt 3
ITT			SAA1293-10	zeszyt 5
ITT			SAA1293-20	zeszyt 5
JVC	AV-21TS1EN(EK), AV- 21(25)SX1EK	BB	M37221M6-063SP, M37221MA- 052SP, M37204M8-847SP	zeszyt 9
JVC	AV-A14M3, AV-A14T3, AV- A14AU3, AV-1413EE	CG	MN1873287JX(Z)	zeszyt 14
JVC	AV-21L91-BK, AV-25L91- BK, AV-29L91-BK	CH	TDA9386N12S0555	zeszyt 16
JVC	AV-25L81-BK, AV-29L81- BK	CH	TDA9386N12S0454	zeszyt 16
JVC	AV-25LS, AV-25LS-AU, AV-2508TEE	CH	TDA9365N13S0455	zeszyt 16
JVC	AV-25LH, AV-25LX, AV- 25LX-A, AV-25LX-AU	CH	TDA9386N12SS0450	zeszyt 16
JVC	AV-29LS, AV-29LS-AU	CH	TDA9365N13S0436	zeszyt 16

JVC	AV-29LH, AV-29LX, AV-29LX-A, AV-29LX-AU	CH	TDA9386N12SS0432	zeszyt 16
JVC	AV-2908TEE	CH	TDA9365N13S0431	zeszyt 16
JVC	AV-27D201, AV-32D201	GR2	MN1876478JD	zeszyt 14
JVC	AV-29SX1EN	JA	M37204MC-A49SP	zeszyt 5
JVC	AV-25VM1PF, AV-28VM1PF	JB	M37201M6-C435SP	zeszyt 13
JVC	AV-25(28)VM1EN(A)	JC	M37221M6-066SP	zeszyt 2
JVC	AV-28EWEX1EK, AV-32WX1EK	JD	M37270MF-060SP	zeszyt 7
JVC	AV-25TS2...	JE	M37204M C-C40SP	zeszyt 3
JVC	AV-24WT2EK(N), AV-28WR2EK(N)	JF	M37271MF-212SP (213SP)	zeszyt 8
JVC	C-J14EP, C-JT14EI(P), C-J21EP, C-JT21EI(P)	JG	SDA5255-A083, SDA5223-A019	zeszyt 13
JVC	AV-32WP2EN(A), AV-32WP2EP(A)	MB	M37207EFSP+SDA30C163+EPROM	zeszyt 6
JVC	AV-28WH3EP, AV-29TH3EP, AV-29TH3EPS, AV-32WH3EP	MC	M37207MF-150SP	zeszyt 12
JVC	AV-32WFP1EU, AV-32WFP1EK	MD		zeszyt 10
JVC	AV-28Z10EUS, AV-28H10EUS, AV-32H10EUS	MF	SDA6000	zeszyt 16
JVC	AV-14ME	MZ2	M37102M8-C41SP	zeszyt 3
JVC	AV-28GS1EN	MX	M37204M8-A41SP	zeszyt 14
JVC	AV-25GS1E, AV-25S1E, AV-28GS1E, AV-28S1E	MX I	M37204M8-A48SP	zeszyt 15
JVC	AV-25SEE1EK, AV-28S1EK	MX II	M37204M8-A44SP	zeszyt 7
JVC	AV-25S4E/EN/ENS, AV-28S4E/EN/ENS	MX IV	M37204MC-A45SP	zeszyt 13
JVC	C-F14EE/C, C-F20EE/C, C-F21EE/C,		DW370M3	zeszyt 14
JVC	C-FT14EE/C, C-FT20EE/C, C-FT21EE/C		DW5255M4	zeszyt 14
JVC	C-FT14EBU, C-FT20EBU, C-FT21EBU		DW5255RM3	zeszyt 14

JVC	C-V14E, C-V14EKB, C-V14EKW, C-VT14E, C-VT14EKB, C-VT14EKW, C-V21E, C-VT21E, C-VT21EK, C-Y21EK		ST9291	zeszyt 14
KENDO	CT63S92, CT71S92	BS990.0	TVPOSM90.02 (90.03)	zeszyt 4
KITON	ARIZONA, COLORADO, NEVADA (II), CTV5100, CTV 5110, CTV5125, CTV5510, CTV5525, CTV7225	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8
LIFETEC	LT 5548, LT 7095, LT 7099VTS	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8
LIFETEC	LT7000	TV-8	ST6365	zeszyt 2
LOEWE	CONCEPT+7000	C9003	CCU3000+EPROM	zeszyt 2
LOEWE	ART. 1, ART T28, ART S 24, PROFI TV 28, PROFI T28, STUDIO T 28, STUDIO T 2	C9000 "Digital"	CCU2070	zeszyt 1
LOEWE	ART500(630,700)	C9002S	CCU2070	zeszyt 3
LOEWE	ART. 55, ART. 63, ART. 70, ART. 82, ART. 84, ART. 95, CONCEPT 63, CONCEPT 70, STUDIO 70, STUDIO 84	C9001	CCU2070	zeszyt 5
LOEWE	CONTUR 1263, CONTUR 1270, MONACO 7700, PROFIL 2163, PROFIL 2170, PROFIL 3070	E3000	CCU3000+EPROM	zeszyt 6
LOEWE	ART. V630, ART V630SAT, ART V700, ART V700SAT	Q2000	CUC3000+EPROM	zeszyt 5
LOEWE	PLANUS 4672, PLANUS 4872, PROFIL 3563, PROFIL 3570, PROFIL 3572	Q4000	CCU3000+EPROM	zeszyt 6
LUXOR	180552625	EUROSTEREO 2B-F	NES3AR01, NES3BR02, NES2-2R01, NES2-4R01	zeszyt 2
LUXOR	3392TX, 5192TX, 5592TX	MONO PLUS 2	SDA5222(23), SDA5252(53)	zeszyt 11
LUXOR,	6345, 6346, 7045, 7046, 7438	FEATURE STEREO	SDA30C163+EPROM	zeszyt 7
MATSUI	TVR 151		OEC 6024B	zeszyt 12
MATSUI	TVR161		OEC 6030A	zeszyt 13

MATSUI	TVR 162 (T,W)		OFC6044B	zeszyt 9
MATSUI	20 OT, 20 OR, 200 T, 200 R		OEC60210	zeszyt 8
MATSUI	1408R (T)		OEC6053A	zeszyt 12
MATSUI	1409R/T			zeszyt 12
MATSUI	1410R		SAA5541	zeszyt 14
MATSUI	2130TX, 2190, 2530TX, 2580, 2590	11AK02 DIGITAL	CCU2070-04 (CCU-VES-01)	zeszyt 7
MEDION	MD7103	11AK18	SDA30C264+EPROM	zeszyt 4
MEDION	MD5122, MD5538VT, MD5548VTS, MD7042VTS, MD7048VTS	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8
MINOKA	MK1498N/N, MK2183/N		TVPO 2066	zeszyt 7
mitsubishi	CT-32CW1BD, CT32CW1CD		M37206MC-B69SP	zeszyt 12
mitsubishi	CT-21(25)A2STX(LST), CT- 21(25)A3SSTX			zeszyt 9
mitsubishi	CT28AV1...	EE3	ST9291N7B1ECS/B10	zeszyt 3
mitsubishi	CT-29BV1 BD	EE3/EE3W		zeszyt 8
mitsubishi	CT25M5G(GT)	EE4	ST9291N6B1NO/B10	zeszyt 3
mitsubishi	C25C7B, C25S7B, C25S7L, C28C7B, C28S7B, C28S7L, C25D7B, C25D7L, C28D7B, C28D7L	EE6	ST9291N7B1xxx	zeszyt 12
mitsubishi	CT25(29)B2EST	EURO 11	CXP80424-120S	zeszyt 3
mitsubishi	CT-33B3STX	EURO -11	CXP80424	zeszyt 13
mitsubishi	CT-25(29)A4STX(LST)	EURO 12	CXP80424-123S	zeszyt 7
mitsubishi	CT-32BW1B	W1	M37206MC-860SP	zeszyt 9
NOKIA	6375, 6385, 7175, 7185, 7495	EUROSTEREO FEATURE PLUS		zeszyt 11
NOKIA	7173	EUROSTEREO 2B-F	NES3AR01, NES3BR02, NES2- 2R01, NES2-4R01	zeszyt 2

NOKIA	28W35, 28F9C, 32W35, 32F9C, 7138, 7293, 7294,	EURODIGI 16:9 8238, 8239, 8293, 8294	CCU3000+EPROM	zeszyt 13
NOKIA	6386, 7186, 7496	FEATURE STEREO	SDA30C163+EPROM	zeszyt 7
NOKIA	3724, 5524, 5525	MONO PLUS	ST6377NMP03R01	zeszyt 11
NOKIA	3721, 5121, 5521	MONO PLUS 2	SDA5222(23), SDA5252(53)	zeszyt 11
NOKIA	6355VT(EE, NICAM), 6365VT EE, 7155VT(NICAM), 7165VT EE(SAT)	STEREO-PLUS	ST92T93	zeszyt 4
NOKIA	3725CW, 4525CW,		ST6367	zeszyt 1
NOKIA	61971, 6197, 6197DPL,		30C163+EPROM	zeszyt 1
NOKIA	7295, 7296, 8296		30C163+EPROM	zeszyt 1
NORDMENDE	SPECTRA STEREO 9508 HiFi, 5205, 5208, 5245, 5255, 5335, 6035, 8205, 8208	F15 (-01), F16 (-01)	CCU THOM 07 (THOM 04, THOM 06)	zeszyt 4
NORDMENDE	Futura 63BSP 990.545 A	F17-IMC	HD 40 49 19 – A22 (A16)	zeszyt 8
NORDMENDE		ICC9	ST9093	zeszyt 1
NORDMENDE	PRESTIGE 63(72)KH, SPECTRA SC63TH	ICC10	ST90R91+EPROM	zeszyt 2
NORDMENDE	SL70D SPACESYSTEM	ICC11	ST90R91BC1+EPROM	zeszyt 8
NORDMENDE		ICC17	ST92R195+EPROM	zeszyt 6
NORDMENDE		ICC19	ST90R92+EPROM	zeszyt 6
NORDMENDE		TX91	ST9291	zeszyt 1
NORDMENDE		TX92	ST9291	zeszyt 1
NORDMENDE	6356DH, 7056DH	TX92F ver.2	ST92T93J9B1	zeszyt 11
NORDMENDE		TX807	TMP47P1637UN	zeszyt 7
OCEANIC	7185VT, 7495	EUROSTEREO FEATURE PLUS		zeszyt 11
OCEANIC	5552, 6352, 6363, 6372, 6383,	EUROSTEREO-2	NES3AR01(BR02), NES2-2R01(-	zeszyt

(ITT-NOKIA)	7163, 7172, 7183		4R01)	4
OCEANIC	5554, 6355, 7155	STEREO-PLUS	ST92T93	zeszyt 4
ORION	6325VT		CCU2030	zeszyt 1
ORION	TV2816, TV7109PIP, TV8295PIP	7000 PROFESSIONAL	83C055	zeszyt 9
ORION	CT63S92/N, CT71S92/N	BS990.0	TVPOSM90.02 (90.03)	zeszyt 4
OSAKI	CT-51T/R		TVP2070	zeszyt 7
PALLADIUM	727, 997		CCU2070	zeszyt 10
PALLADIUM	765/325(368,384)	PC100	ST92T93	zeszyt 3
PANASONIC	TX-G10, TX-G10/C	AC1	SDA5255V61, SDA5255V72	zeszyt 5
PANASONIC	CT-27SF14V, CT-27SF24V, CT-27SF34V (CV), CT- F29992V (LV, VV, XV), CT- 31SF24V, CT-31XE24CV	APEDP264/266, ATPEDP264		zeszyt 5
PANASONIC	TX-43P15X, TX-43P15H, TX-43P15HZ, TX-43P15HQ, TX-51P15X, TX-51P15HQ, TX-51P15HZ	E-3	MN1876476TX1	zeszyt 13
PANASONIC	TX-W28D1F	E2100		zeszyt 10
PANASONIC	TX-25(28)W3C	EURO-1	CCU3000-13+EPROM	zeszyt 3
PANASONIC	TX-21(25)MD1C	EURO-2	CCU3000I-05+EPROM	zeszyt 3
PANASONIC	TX-21MD3, TX-25MD3, TX- 25XDP3	EURO-2M	CCU3000I-07+EPROM	zeszyt 13
PANASONIC	TX-25(29)AD50F	EURO-3	SDA30C164+EPROM	zeszyt 3
PANASONIC	TX-25(28)XD60C(F, P, S), TX-25AD70C(F, F/P), TX- 28XD70C(F), TX-W28D2DP, TX-W28D3F(F/P), TX- W28R3DP(F/L), TX- 29AD70C(DP, F, F/P), TX- W32D2(0, DP), TX- W32D3DP(/L, F, F/P), TX-W36D3DP(DP/L)	EURO-3 (EURO- 3H/-3W/-3HW/- 3HWS)	SDA30C164+EPROM	zeszyt 6
PANASONIC	TX-25LD4C, TX-28LD4C, CT-33SF24TV	EURO-4	SDA5450C48GE+EPROM	zeszyt 4



PANASONIC	TX-25AD90F, TX-25LD90F(P), TX-25XD90F(P)/A/B, TX-28LD90F, TX-28SL10F, TX-28XD90F(P)/A/B, TX-29AD90F, TX-W28D4F, TX-W28D5F(P), TX-W32D4DP(F), TX-W32D5DPF(F, F/P), TX-W32PF10(F), TX-W36PF10(F)	EURO-5	SDA5450C48-1+EPROM	zeszyt 6
PANASONIC	TX-47PT1	EURO-5VP	SDA5450C48-1+EPROM	zeszyt 11
PANASONIC	TX-29P250T, TX-34P300K/XM, TS-34P300XX	EURO 7	SDA6000	zeszyt 15
PANASONIC	TC-21GF10R, TC-25V20R	MX-2	MN152810TTZ	zeszyt 11
PANASONIC	TC-25V50R(T), TC-29V50R(T)	MX-2A	MN152810TZN	zeszyt 11
PANASONIC	TC-2166R(T), TC-2170R(T), TC-21GF80R(T)	MX-3	MN152811TJN	zeszyt 9
PANASONIC	TX-2150T. TX-2150TS	MX-3	MN152811TZT	zeszyt 9
PANASONIC	TC-2105RT, TC-2150R(RM,RS), TC-2155R, TC-21S1(10R)	MX-3 (MX-3C)	MN152811TZX	zeszyt 9
PANASONIC	TC-25G10R, TC-25V80R, TC-29G10R, TC-29V80R, TX-25G10T, TX-25V80T, TX-29G10T, TX-29V80T	MX4S	MN1874083TFP	zeszyt 15
PANASONIC	TC-25P80T, TX-29P80T	MX-10	MN1873287TD	zeszyt 16
PANASONIC	TC-25GF10R, TC-29GF10R	M17	MN1874033TWY	zeszyt 10
PANASONIC	TC-29GF15R, TX-33GF15P	M17	MN1874033TNX(TNT)	zeszyt 10
PANASONIC	TC-25GV10R, TC-29GV10R	M17V	MN1874033TNH	zeszyt 10
PANASONIC	TC-29GF30R	M18	MN1874033T3Z	zeszyt 10
PANASONIC	TX-21CK1	Z-8		zeszyt 8
PANASONIC	TC-14B3R, TX-14B3T	Z-375	M370M2, M5255M2	zeszyt 8
PANASONIC	TX-14GV1, TX21GV1	Z-421V	M37777EFQ	zeszyt 11

PANASONIC	TC-14K1R, TC-14S3M, TC-14S3R(/W, C, F, L, P), TC-14S4R(C, F, L, P), TC-21K1R, TC-14S3M, TX-14C3T/S(Y), TX-14K1T, TX-14K2T, TX-14S3T(/W, C, F, L, P), TX-14S4T(C, F, L, P), TX-21K1T, TX-21K2T, TX-21S3T(/C, F, L, P), TC-21S3R(/C, F, L, P), TC-21S4R(C, F, P), TC-21S4TL, TX-21S4T(C, F, L, P)	Z-7	SDA5222V21/23/50/51, SDA5254V11/12/31/40/41, SDA5223V22	zeszyt 5
PHILIPS			P83C055 (CTV530)	zeszyt 1
PHILIPS			SAA5290 (CTV811S)	zeszyt 16
PHILIPS		A8.0A	P87C770	zeszyt 15
PHILIPS		A10E	SAA5565	zeszyt 16
PHILIPS	17PT156B	AA5	TMP47C1637	zeszyt 2
PHILIPS	25DC2660, 28DC2070, 28DC2670	D16-II	80C31+EPROM	zeszyt 3
PHILIPS	21PT700A, 21PT702A	FL1.0 (AB)		zeszyt 9
PHILIPS	25ML8966, 28ML8976, 33ML8996	FL1.1/FL1.7		zeszyt 6
PHILIPS	28ML8916	FL1.2		zeszyt 3
PHILIPS	25ML8500, 25ML8505	FL1.6		zeszyt 6
PHILIPS	25(28)PV7505(06), 25SL5500, 25SL5501, 28CL6770(6), 28CL6970(6), 33PT700(702)(712)A	FL1.10		zeszyt 6
PHILIPS	25(28)PT800A(B), 25(28)PT802A, 28PT805A(B), 28PT815A, 28PT817A, 28PT840(842)(845)(847)A, 28PT900(902)(910)(912)A, 33ML8905, 63(70)TA7910(30), 70TA80(83)10(30), 70TB7890	FL1.14 (FL1.16/FL1.17)		zeszyt 6
PHILIPS	28PW960 ...	FL2.24		zeszyt

				2
PHILIPS		FL2.26, FL4.27		zeszyt 15
PHILIPS		GR2.1	TMP47C1237, TMP47C1637	zeszyt 14
PHILIPS		GR2.2	TMP47C1637	zeszyt 1
PHILIPS	25PT5301, 29PT5301, 29PT5321	GR2.4 (SUP)	TMP87CM36	zeszyt 5
PHILIPS	21PT1342	L6.1		zeszyt 3
PHILIPS		L6.2	SAA5290ZP/039 (/040, /055)	zeszyt 4
PHILIPS	21PT2622/69R	L7.2A		zeszyt 4
PHILIPS		L9.1A	SAA5565	zeszyt 14
PHILIPS	21PT441, 21PT442, 24PW6301, 24PW6321, 25PT4411, 25PT4421, 25PT4511, 25PT4512, 28PT4301	MD1.1E	TMP87CM36	zeszyt 10
PHILIPS		MD1.2E	TMP87CM36, TMP87CS38N	zeszyt 8
PHILIPS	29PT8303	MD 2.21/2.22/2.23	P90CE201AEB/02	zeszyt 5
PHILIPS	25CE5570	2B	MAB8441P/T007, MAB8461P/W008/W132/W155	zeszyt 5
PHILIPS	17CE7630, 17CE7531, 21CE7550, 21CE7551, 21CE7554, 21CE7649, 21CE7650, 21CE7655, 24CE7571, 24CE7574, 24CE7570, 24CE7771, 27CE7590	3A	MAB8461P	zeszyt 5
PROSONIC	CTV7289DVT	11AK16	SAA5296+EPROM	zeszyt 4
ROYAL-LUX	TV5188, TV5199		“NANCY”	zeszyt 16
ROYAL-LUX	TV5490TSN, TV5599TSN, TV6399TSN		ST9 “Monica 4”	zeszyt 16
ROYAL-LUX	TV7199 TXT (ST, NICAM)		ST9 Monica 3	zeszyt 11
QUELLE	FT71261	EURODIGI	CCU3000+EPROM	zeszyt 5

QUELLE	FT7126, FT7128, FT7129, FT7191, FT71263	5100	83C1540	zeszyt 8
SABA		ICC9	ST9093	zeszyt 1
SABA		ICC10	ST90R91+EPROM	zeszyt 2
SABA	T7068TL	ICC11	ST90R91BC1+EPROM	zeszyt 8
SABA		ICC17	ST92R195+EPROM	zeszyt 6
SABA	T7078TM, T7041E	ICC19	ST90R92+EPROM	zeszyt 6
SABA	M6328, M7228, T6355, T7055	SC-85	ST6395-R32-TOP, ST6395-R30, ST6395-B33-NTSC	zeszyt 13
SABA		TX91	ST9291	zeszyt 1
SABA		TX92	ST9291	zeszyt 1
SABA	8505VT, M6361GH, M7061GH, T7066SH	TX92F ver.2	ST92T93J9B1	zeszyt 11
SABA		TX807	TMP47P1637UN	zeszyt 7
SABA	M3616ET, M5110E, M5115ET	TX807C/CS	TDA9351N1/N2, TDA9367N1	zeszyt 14
SALORA	25E80, 28E80, 29E90	EUROSTEREO FEATURE PLUS		zeszyt 11
SALORA	2...N6	EUROSTEREO 1	NES3-..., NES2-...	zeszyt 2
SALORA	21N6F	EUROSTEREO 2B-F	NES3AR01, NES3BR02, NES2- 2R01, NES2-4R01	zeszyt 2
SALORA	25V80, 28V80	FEATURE STEREO	SDA30C163+EPROM	zeszyt 7
SALORA	PL14 24101	M1	CCU-SALO-07 (CCU20xx)	zeszyt 4
SALORA	14S3, 20S3, 21S3	MONO PLUS	ST6377NMP03R01	zeszyt 11
SALORA	14MP50VT, 20MP50VT, 21MP50VT	MONO PLUS 2	SDA5222(23), SDA5252(53)	zeszyt 11
SALORA	28T7	STEREO PLUS	ST92T93	zeszyt 2
SALORA	21 T 6, 21 T 7, 25 T 6	STEREO-PLUS	ST92T93	zeszyt 4
SAMSUNG	TB14C52S/XEC, TB14C5S2S/XEG, TB14C5T2S/XEC,	C15A	CXP85340A-329S	zeszyt 9

	TB14C5DT2S/XET(XEC), TB20C52S/XET, TB20C5DF2S/XEG(XET), TB20C5DT2S/XEC, TB21B5DF2S/XEC			
SAMSUNG	TW14C52S/BWT	C15A	CXP85340A-329S	zeszyt 14
SAMSUNG	DW215VDX/COM, DW215VDX/SED	C16A	SAA5556PS-OTP	zeszyt 14
SAMSUNG	CS14H3X, CS14S1X, CS15K2X,CS15K8WX, CS20S4WX, CS2073S, CS21D8S, CS21F5X, CS21S1S, CS21S4WX, CS2173S	KS1A	SPM802ER (SPM802ERN)	zeszyt 13
SAMSUNG	CS15A8ST7C, CS21A8S7C, CS21A8WT7C, CS21A9WT7C, CS22B6W7X, CS22B7W7X, CS22B8W7X, CS22B9GT7X, CS22B9NT7X, CS25A6GW7C, CS25A6WAC, CS25D4WT7C, CS29D6WT7X, CS29D8GF7C, CS29D8WT7X, CZ29D8W7X	KS2A(P)	SDA5552- xxx	zeszyt 12
SAMSUNG	CS29A6MT8X, CS29A7HPBX, CS29A7PTBX8, CS29A5MT8X, CS29A5PF8C, CS29A5MT8X, CS29A6PF8X, CS29A6WT8X	KS3A(P)	SDA5552-xxx	zeszyt 12
SAMSUNG	CB5373Z/UKV..., CB5373T/UKV2...	P1B	SAA5290ZP-020, Z8933212PSC?R1971(SZM-137M3)	zeszyt 2
SAMSUNG	SP403JHAX	PLT51A	SDA30C263+EPROM	zeszyt 10
SAMSUNG	CK14F1Z5X/XEH (XEO), CK14F1T5X/XEH (XEO), CK20H1Z5X/XEH, CK20H1T5X/XEH, CK21H1T5X/XEO, CK21H1Z5X/XEH, CK501FT5X/XEH, CK501FT5X/XEO, CK501FZ5X, CK531FT5X, CK531FZ5X, CK3373T5X,	S15A	Z90234-R3782, Z90203-R3787, SAA5291PS-097, SAA5291PS-098	zeszyt 5

	CK3373Z5X, CK5020T5X, CK5020Z5S(X), CK5073T5X, CK5073Z5X, CK5079T5X/XEH, CK5079Z5X, CK5320T5X, CK5020Z5S(X), CK5373T5X, CK5373Z5X, CK5379T5X, CK5379Z5X			
SAMSUNG	CK5344N3X/XEO, CK5344W3X/LIB, CK566BT3X/XEO, CK569BN3X/XEO, CK5944W3X/LIB, CK5944N3X/XEH(XEO), CK6844N3X/XEH(XEO)	S51A	SAA5291PS-135, SAA5297M1A-230	zeszyt 5
SAMSUNG	CW28C7VH2X/XEO	S53A	SDA5457-OTP	zeszyt 5
SAMSUNG	CK5038ZR/TBWCX	SCT11B	TMS73C127	zeszyt 11
SAMSUNG	CK623CNX/XEO, CK703CNX/XEO	SCT12B	Z8933212PSC-R2656	zeszyt 5
SAMSUNG	CK3373T4X(S)/BOY(BOB), CK5020T4S/ANA (BOM), CK5320T4X/XSP(XEO), CK5073T4X/XEO, CK5373T4X/SSH(XEO), CK5379T4X/XEO	SCT13B	SAA5291PS-032, SAA5291PS-098	zeszyt 5
SAMSUNG	CS7277PT/POLX	SCT51A	RM132ER-SSOM132ER	zeszyt 3
SAMSUNG	WS28W6HA, WS32W6HA	SCT53A	SDA30C264+EPROM	zeszyt 10
SAMSUNG	CS3403ANPX/XSH, CS3703AN1X/XSH, CS3703ANPX/XSH	SCT55A	Z8931312PSC-R3366	zeszyt 10
SAMSUNG	CS667APTRX/BWT	SCT55A	Z89313-R3856	zeszyt 10
SAMSUNG	CS29A6MTRX/BWT	SCT55A	Z89313-R4038	zeszyt 10
SAMSUNG	CS3403AMNS/XSH, CS3403AMNX/XSH, CS3403APX/XSH, CS3703AMNX/XSH, CS767AMTRX/BWT	SCT55A	Z90341-OTP	zeszyt 10
SAMSUNG	CK566BT1X/XEO, CK569BNT1X/XEO	SCT57B	Z8933112PSC-R1789, Z8933212PSC-R3766	zeszyt 5
SAMSUNG	CS761BN2X, CS761BGN2X, CS761BGZ2C, CS761BN2C,	SCT57C	Z8933112PSC-R1789	zeszyt 14

	CS761BNT2X, CS761BS2C, CS761BT2X, CS761BZ2C, CS761BZ2X			
SAMSUNG	TB331VBZ1S/XEG, TB331VDT1S/XEC, TB331VDZ1S/XEC(XSA), TB501VAT1S/XEG, TB501VCT1S/XEC TB501VDZ1S/XET, TB531VAT1S/XEC, TB531VCT1X/XSA	SCV11F	CXP85332A-323S	zeszyt 9
SAMSUNG	SP434JMFx/SAP(/XST), SP524JMTRX/BWT(SIG)	SPT52A	Z90341-OTP	zeszyt 10
SANYO	C28EH65N		SAA5290	zeszyt 1
SANYO	C28WK1N	A8-B	M37201E6-E8WW	zeszyt 2
SANYO	CEP2876DA	EB1-28	SAB8032+EPROM	zeszyt 4
SANYO	C28ER17EE- 00	EB4-A	SAA5290ZP-033	zeszyt 2
SANYO	C28EH64, C28ER15N, C28ER14, C28EH89	EB4-A	SAA5290	zeszyt 6
SANYO	CE28WN3, CE32WN3	EB5-W	SAA5563PSM30053	zeszyt 10
SANYO	CE14M2	EC-5A	SAA5288PS/003	zeszyt 10
SANYO	C14EA97,C21ES35	EC-5A	SAA5290ZP/065	zeszyt 10
SANYO	CE14MT2SL	EC-5A	SAA5290PS/117	zeszyt 10
SANYO	CEP2570D, CEP2870D	ED0 (2031)	SAB8032A+EPROM	zeszyt 5
SANYO	CEP2572-00(N), CEP2573-00 (N)	ED1	SAB8032A-P (8032AH)+EPROM	zeszyt 4
SANYO	CEP2872(N), CEP2873(N)	ED1-28	SAB8032A+EPROM	zeszyt 2
SANYO	C14EA17(67)EX, C20EE17EX, C21EF17(67)EX	F6-A	M34300N4-628SP	zeszyt 5
SANYO	C28WP1,	WB2-A	M37207MF-061SP	zeszyt 10
SANYO	CP28WP2, CP32WP2	WB2-A	M37207MF-152SP	zeszyt 10
SANYO	CP28WP3, CP32WP3	WB2-A	M37207MF- xxxSP	zeszyt 10

SANYO	C28WN1, CE32WN2	WB2-B	M37207MF-072SP	zeszyt 11
SCHAUB LORENZ	6578F		CCU SEL04, CCU SEL07A	zeszyt 3
SCHNEIDER	STV6550		CCU2070	zeszyt 1
SCHNEIDER	CTV2703	DTV-1	CCU09, CCU10, CCU13	zeszyt 2
SCHNEIDER	STV 6156	DTV-2	CCU2070	zeszyt 2
SCHNEIDER	Las Vegas	DTV-2	CCU-S7916	zeszyt 11
SCHNEIDER	DIGITECH-300	DTV-3	CCU3001+EPROM	zeszyt 2
SCHNEIDER	TV5525	TV-4	ST6385	zeszyt 3
SCHNEIDER	STV6708, CTV2780	TV-8	ST6365	zeszyt 2
SCHNEIDER		TV-9	ST92R195 A0+EPROM	zeszyt 6
SCHNEIDER	STV2901T	TV9.7(TV9.8)	ST92R195+EPROM	zeszyt 11
SEG	CT8050, CT8100	11AK18	SDA30C264+EPROM	zeszyt 4
SEG	CT2500, CT2501(A), CT2551, CT2590ST, CT3050, CT3190ST, CT3240BIF, CT3250ST, CT77(8)00, CT8050, CT8100, Premium: Basel (II), Berlin, Bern, London, Modena, Sydney (II), Zurich	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8
SEG		11AK20	ST6387	zeszyt 6
SELECO	21/25/28SS564(9) ...	BS950	SECO18A, SECO19 (SE8800UP)	zeszyt 2
SHARP	DV-5935H	BCTV-A	SAB8032+EPROM	zeszyt 7
SHARP	54DT-25SC.	CA-1	IX1655BMN1, IX1669BMN0 (SDA5222)	zeszyt 4
SHARP	63DS-03SC, 70DS-03SC	CA-10	IX16298M (C161K)	zeszyt 11
SHARP	63CS..., 70CS...	CS	SAB-C502+EPROM	zeszyt 1
SHARP	66DW-18H, 76DW-18H	CW-100	SDA30C161+EPROM	zeszyt



				12
SHARP	DV-25071S	D3000	CCU3000+EPROM	zeszyt 2
SHARP	DV-5431S	DECO-5	CCU3000+EPROM	zeszyt 2
SHARP	DV-5101H, DV-5103H	EURO-DS1	CCU3000+EPROM	zeszyt 7
SHARP	DV3750	S3B	IX1492BMZZ	zeszyt 1
SHARP	DV5451	S3B	IX1492BMN1	zeszyt 1
SHARP	DV546..	4BS-A	IX1492BMN3	zeszyt 1
SHARP	DV-5465S, DV-5470S	4BS-B	SAB8032+EPROM	zeszyt 11
SHARP	DV6340S	4BS-C	SAB8032+EPROM	zeszyt 1
SHARP	DV7032S	4BS-C	SAB8032+EPROM	zeszyt 1
SHARP	37AM...	5BS	IX1572BMN0 (SDA20561-A529)	zeszyt 1
SHARP	51AM-12S, 51AT-15S, 54AM-12S, 54AT-15S	5BS-A	SDA5254	zeszyt 15
SIEMENS	MP45, SP45, SP55, SQ25	100-30		zeszyt 3
SIEMENS	FS269M4, FS269M4II	CS9110	SDA30162+EPROM	zeszyt 11
SIEMENS	FC202, FC204, FC206, FC208, FC210, FC212	CM9300	ZC88642P, ZC424701	zeszyt 6
SONOLOR	63 SN 601	EUROSTEREO-2	NES3AR01(BR02), NES2-2R01(- 4R01)	zeszyt 4
SONY	KV-X2560(1)(2), KV- S3411(12),(13)	AE-2	SDA30C162+EPROM	zeszyt 2
SONY	KV-A2133B, KV-A2541A (B,D,K), KV-A2542U, KV- A2543E, KV-A2941A(B,D), KV-A2942U, KV-A2943E, KV-B2521A(B,D,K), KV- B2523E, KV- B2921A(B,D,K), KV- B2923E, KV-E2551A(B,D,K), KV-E2553E, KV- E2951A(B,D,K), KV-E2953E, KV-S3431A(B,D,K), KV- S3432U, KV-S3433E, KV- X2171A(B,D,U), KV-	AE-2B	SDA30C162+EPROM	zeszyt 9

	X2172U, KV-X2173B(E), KV-X2571A(B,D,K), KV-X2572U, KV-X2573B(E), KV-X2971A(B,D), KV-X2973B(E,K,U)			
SONY	KV-S2941, KV-S2942, KV-S2943, KV-W2813, KV-E2561, KV-E2563	AE-2F	SDA30C162GEG+EPROM	zeszyt 4
SONY	KV-S2951, KV-S2952, KV-S2953	AE-3	SDA30C164+EPROM	zeszyt 4
SONY	KV-29C3...	AE-4	SDA30C164+EPROM	zeszyt 3
SONY	KV-28FX60, KV-32FX60	AE-5	SAB-C161R1-LM	zeszyt 7
SONY	KV-29FQ75K	AE-5A	SAB-C161R1_-LM	zeszyt 14
SONY	KV-ES29M80, KV-ES29M81, KV-ES29M90	AG3	CXP750096-012Q	zeszyt 16
SONY	KP-S4111K, KP-S4112U, KP-S4113	AP-1E	SDA30C163+EPROM	zeszyt 10
SONY	KV-14V5A(B,D,E,K,U), KV-14V6A(B,D,E,U), KV-21V5A(B,D,E,K,U), KV-21V6A(B,D,E,U)	BC-4	CXP85460-063Q-TL	zeszyt 9
SONY	KV-24(28)WS1, KV-2531, KV-2533, KV-25M1, KV-25T1, KV-C2171, KV-C2173, KV-C2991, KV-M2921, KV-X2500(2)(3), KV-X25(29)01, KV-X25(29)81	BE-3B	CXP85340A-117Q-TL, CXP85340A-116Q-TL	zeszyt 6
SONY	KV-C2901, KV-C2903, KV-C2908, KV-C2909	BE-3C	CXP85340A – SVS190 (-SV5190)	zeszyt 4
SONY	KV-25F1, KV-25X1, KV-25C1, KV-28WS2, KV-29X1, KV-29FX11, KV29F2, KV-29C2,	BE-3D	SDA5250+ EPROM	zeszyt 2
SONY	KV-28DS20U, KV-28DX20U, KV-28FX20A(B,D,E,U), KV-32DX20U, KV-32DS20U, KV-32FX20A(B,D,E,U), KV-28FX201A(B,D,E)	BE-3E	SDA30C263+EPROM	zeszyt 10
SONY	KV-M2171	BE-4	SAA5290	zeszyt 2
SONY	KV-21R1A(D,E), KV-25R1A(D,E,K,R)	BE-5	SDA5255-A001	zeszyt 9
SONY	KV-20WS1A(B,D,E,K,R,U)	BE-5	SDA5255-A031	zeszyt

				9
SONY	KV-16WS1A(B,D,E,U), KV-21X4A(B,D,E,K,L,R,U)	BE-5	SDA5250M-C9+EPROM	zeszyt 9
SONY	KV-21C1B(D,E,K,R), KV-21C4B(D,E,K,R), KV-21X1A(B,D,E,K,L,R,U)	BE-5	SDA5250H-C9+EPROM	zeszyt 9
SONY	KV-T29CF1, KV-32DS60U	BG-1S	CXP85224A-037S	zeszyt 14
SONY	KV-EF29M31, KV-EF29M61, KV-EF29M80, KV-EF29M90	BG-1L	CXP85452-090S, CXP85452-091S	zeszyt 16
SONY	KV-J14M1J, KV-2199M5T	BG-2S	CXP85220A-060S	zeszyt 15
SONY	KV-25X5..., KV-29X5...	FE-1	SAA5497PS/M1A/038 (/039, /040)	zeszyt 6
SONY	KV-21FX20(A,B,D,E,K,R), KV-25FX20(A,B,D,E, K,R), KV-29FX20(A,B,D,E,K,R,U), KV-29FX201(D,E), KV-29FC20(A,B,D,E)	FE-1A	SAA5564PS/M3A/008	zeszyt 15
SONY	KV-28DS60U,	GE-1A	SDA30C164+EPROM	zeszyt 14
SONY	KV-K21MF1, KV-K25MF1, KV-K25SN21, KV-K29CF1, KV-K29MF1, KV-K29SN21	G3F	CXP80424-SV4652	zeszyt 10
SONY	KV-28FD1E(K), KV-32FD1E(K)	GE-1	SDA30C164+EPROM	zeszyt 11
SONY	KV-V1430A(B,D,E,K,U)	TE-1	CXP85460-004S	zeszyt 9
SONY	KV-21V4A(B,D,E,U)	TE-1	CXP85460-028Q	zeszyt 9
SONY	KV-14V4A(B,D,E,U),	TE-1	CXP85460-035S	zeszyt 9
TATUNG		E1N/E1W	ST6385BB1/BEE	zeszyt 9
TATUNG	DYN9B02, DYN9B51T	B1	PCB83C528-007	zeszyt 7
TATUNG	T25N440, T28N440, T32W440	440	SAA5297	zeszyt 12
TELEFUNKEN		ICC09	ST9093	zeszyt 1
TELEFUNKEN	S5400DMD PALcolor	ICC10	ST90R91+ EPROM	zeszyt 2
TELEFUNKEN	S4400(5400)DM PALcolor, S590 NIC PALcolor	ICC11	ST90R91BC1+EPROM	zeszyt 8

TELEFUNKEN		ICC17	ST92R195+EPROM	zeszyt 6
TELEFUNKEN	DF440E, DS570E, MF640E, DH540KE, RP740	ICC19	ST90R92+EPROM	zeszyt 6
TELEFUNKEN		IDC2.2.01	CCU3000+EPROM	zeszyt 5
TELEFUNKEN		TX91	ST9291	zeszyt 1
TELEFUNKEN		TX92	ST9291	zeszyt 1
TELEFUNKEN	DG2566H, DG2866H	TX92F ver.2	ST92T93J9B1	zeszyt 11
TELEFUNKEN		TX807	TMP47P1637UN	zeszyt 7
TELEFUNKEN	MA111E, MA116ET, MA211E, MA216ET, MF211E, MF216ET, MF220E	TX807C/CS	TDA9351N1/N2, TDA9367N1	zeszyt 14
TELEFUNKEN		618	HD404 918	zeszyt 6
TELEFUNKEN	BS920D, BS920DP	619A, 619A-2	CCU3000+EPROM	zeszyt 4
TELETECH	7202, CT510, CT511(A), CT550, CT555A, CT560, CTV3245	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8
TELESTAR	6855, 6870	PT-92	TDA935x/6x/8x	zeszyt 11
TELESTAR	CD855T	PT-92DVD	TDA935x/6x/8x	zeszyt 16
THOMSON		ICC9	ST9093	zeszyt 1
THOMSON	70DK78LCY	ICC10	ST90R91+ EPROM	zeszyt 2
THOMSON	28DT68L, 29DH55N, 32VT68N, 72MK89D	ICC11	ST90R91BC1+EPROM	zeszyt 8
THOMSON		ICC17	ST92R195+EPROM	zeszyt 6
THOMSON	25DU78K(M), 28DT78ME, 28WS43E, 28WS78KE(M, MP), 29DU70E, 29DH78K, 29DU45ED, 29DL40E, 29DU88M, 29DU40E, 29DL40E, 32WS43E, 32VT75ED, 33MS40E, 37MH40E, 46RH40E, 52RH40E	ICC19	ST90R92+EPROM	zeszyt 6
THOMSON	28DK42E, 28DK45ES,	ICC20	ST92R195B/JAM+EPROM	zeszyt

	28VK45E(S), 28WF45ES, 28WF45ES, 29DF45ES(CS)(EB), 29DJ42E, 29DJ45ES, 32VK45E(S), 32WF45ES, 32WN42E, 32WT45ES, 32WX55ES			12
THOMSON		TX91	ST9291	zeszyt 1
THOMSON		TX92	ST9291	zeszyt 1
THOMSON	25DT66H	TX92F ver.2	ST92T93J9B1	zeszyt 11
THOMSON		TX807	TMP47P1637UN	zeszyt 7
THOMSON	14MG15ET, 14MK15ET, 20DG15ET, 21DG17E, 21MT10E	TX807C/CS	TDA9351N1/N2, TDA9367N1	zeszyt 14
TOSHIBA	2112DBT		CXP80420-125S(1185)	zeszyt 7
TOSHIBA	2505DBT, 2805DBT		CXP80424-105	zeszyt 7
TOSHIBA	2512DDT		CXP80420 – 121	zeszyt 4
TOSHIBA	2552DB, 2555DB, 2852DB, 2855DB		CXP85332A-130S	zeszyt 9
TOSHIBA	2927DB		CXP80424-143S	zeszyt 7
TOSHIBA	2929DD		CXP80424 – 144	zeszyt 4
TOSHIBA	28ZD06B, 32ZD06B	C00S	CXP750010-139S	zeszyt 12
TOSHIBA	32ZD08B	C00S	CXP750010-134S	zeszyt 12
TOSHIBA	32ZD08G	C00S	CXP750010-132S	zeszyt 12
TOSHIBA	2151 RB	C4E-R	P83C055/BBP/158	zeszyt 9
TOSHIBA	1450 TB, 1752 TB, 2151 TB	C4E-R	SAA5290ZP/032(024)	zeszyt 9
TOSHIBA	2152DB	C5S	M37222M6-A87SP	zeszyt 11
TOSHIBA	2857DD	C5SS	TMP87CP38N – 3218 (3228)	zeszyt 4
TOSHIBA	2163DB(DD,DF,DN,DS)	C6S	M37222ECSP	zeszyt

				8
TOSHIBA	2563DB, 2863DB	C6SR	SAA5296ZP/024	zeszyt 10
TOSHIBA	32ZD98G, 32ZD98B	C9SS	CXP750010-102S (+ MB90096-186)	zeszyt 9
TOSHIBA	1450XS(H,C), 2050XS(H), 2150XS, 2150RE	S5E	M37222M6-B84	zeszyt 13
TOSHIBA	1460XSH, 1465XR, 2165XR	S6E	M37222M4-C87	zeszyt 16
TRILUX			SDA20563-A508/A516	zeszyt 1
TRILUX			SDA20563-A518	zeszyt 1
TRILUX	TAP140V, TAP140VT	11AK20	ST6387	zeszyt 6
TRILUX	TAP2131, TAP2531, TAP2831		80C52+EPROM	zeszyt 4
UNIMOR		SIESTA 3	SDA20562-A508	zeszyt 1
UNIMOR		SIESTA 3A	SDA20563-A515/A522	zeszyt 1
UNIVERSUM	FT 81805	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8
UNIVERSUM	FT5916	BS990.0	TVPOSM90.02 (90.03)	zeszyt 4
UNIVERSUM	FT4261/A, FT4270, FT4281, FT4283	E-6	SAB-C502+EPROM	zeszyt 6
UNIVERSUM	FT71261	EURODIGI	CCU3000+EPROM	zeszyt 5
WATSON	FA5119, FA5129, FA5139, FA5329, FA5339, FA7039	11AK19	SAA5255(AK19)PLL/ATS	zeszyt 8